



FRONT

PIN	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
COM	COM				D1E	D1D	D1C	DP1	D2E	D2D	D2C		DP2	D3E	D3D	D3C	DP3	D4E	D4D	D4C
PIN	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
COM	D4B	D4A	D4F	D4G	D3B	D3A	D3F	D3G	REL	D2B	D2A	D2F	D2G	D1B	D1A	D1F	D1G			COM

